

## TYPICAL FM-54E INSTALLATION

- 1) Quikserv windows must be installed level and square to work properly.
- 2) Anchor through each side jamb at two places approx. 5" at top and bottom of each jamb.(See Fig. 1)
- 3) 115V / 15 Amp. Dedicated circuit required.
- 4) Recommended height from floor to service opening to be 36". (Check all local and city codes)
- 5) Silicone all exterior and interior joints.
- 6) All other type of anchoring to be approved by certified engineer.

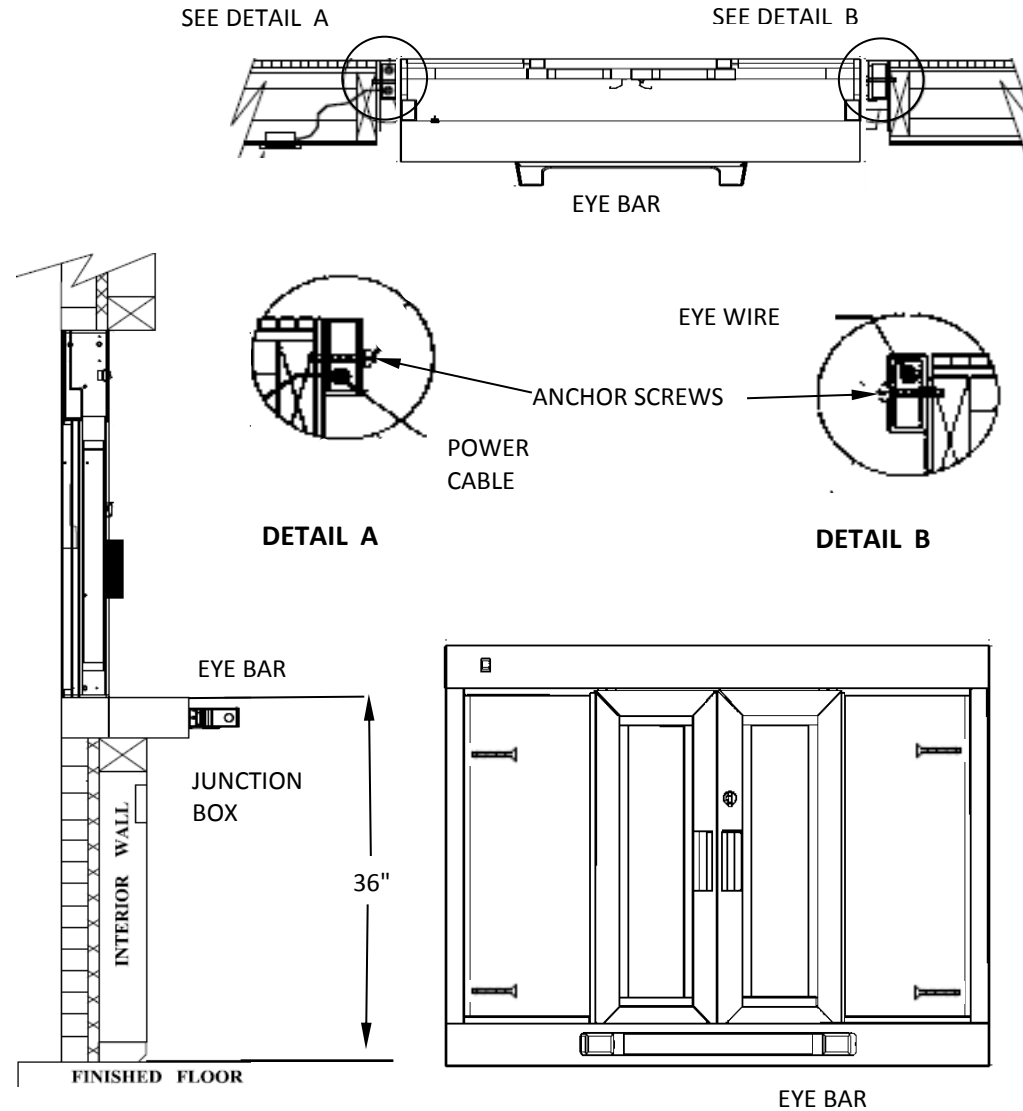


FIGURE 1

## General Notes

**Actual Dimension**  
53-1/2"(W) x 40"(H)

**Service Opening**  
18-1/2"(W) x 26-5/8"(H)

**Rough Opening**  
54"(W) x 40-1/2"(H)

**NOTE 1:**  
Anchor Screws to be supplied by contractor.

**NOTE 2:**  
The junction box for power supply to be supplied by contractor.

**CAUTION:**  
Use caution when drilling. The power supply cable is located in the left hand jamb. Eye wire is located in the right hand jamb.



**COVENANT**  
Security Equipment  
9323 N. Government Way  
Hayden, ID 83835

TITLE: <b>INSTALLATION PROCEDURE</b>				
Drawing Name: <b>CSE-QS-FM-54E INSTALLATION DRAWING</b>				
DATE	DRAWN BY	SCALE	SHEET	SIZE
4/04/2016	RBV	NTS	1 of 1	<b>A</b>

NOTE: THIS DRAWING EMBODIES A CONFIDENTIAL PROPRIETY DESIGN LICENSED BY COVENANT SECURITY EQUIPMENT. IT IS SUBMITTED UNDER A CONFIDENTIAL RELATIONS ALL PATENT, MANUFACTURING AND SALE RIGHTS REGARDING THE SAME ARE RESERVED EXCEPT TO THE EXTENT RIGHTS ARE EXPRESSLY GRANTED TO OTHERS. THE RECIPIENT AGREES BY ACCEPTING HIP. THESE DRAWINGS NOT TO SUPPLY OR DISCLOSE ANY INFORMATION REGARDING THEM TO ANY UNAUTHORIZED PERSON.