



INSTALLATION INSTRUCTIONS:

1. Ensure exterior of window is clean and free of any debris.
2. Install panel to top of service opening on exterior side.
3. Use a rubber or wooden mallet and knock in panel at each corner until flush with exterior frame.
4. If frame does not fit tight use the single sided tape (supplied in box) on one or both sides of panel for better fit.

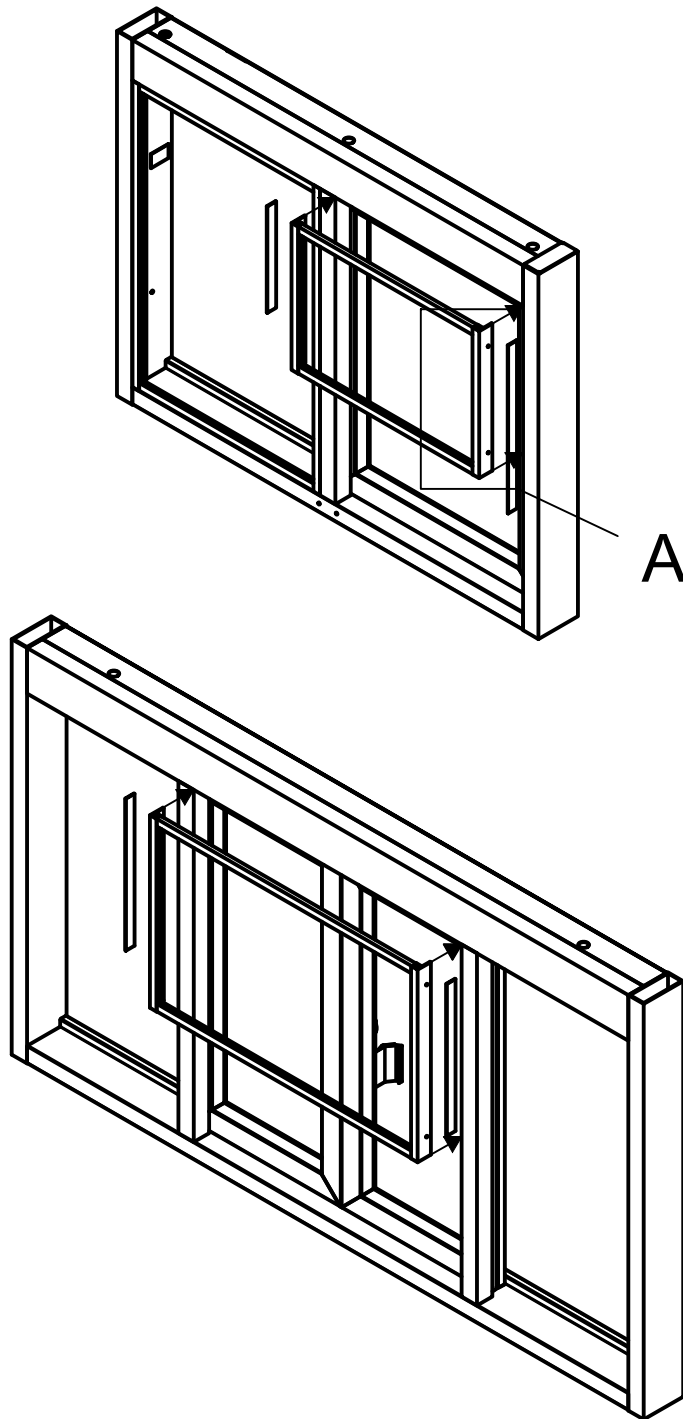

Single sided tape

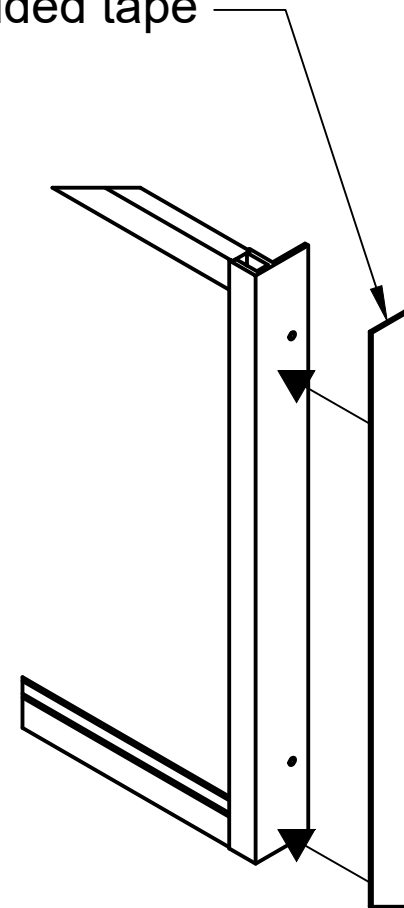

DETAIL A