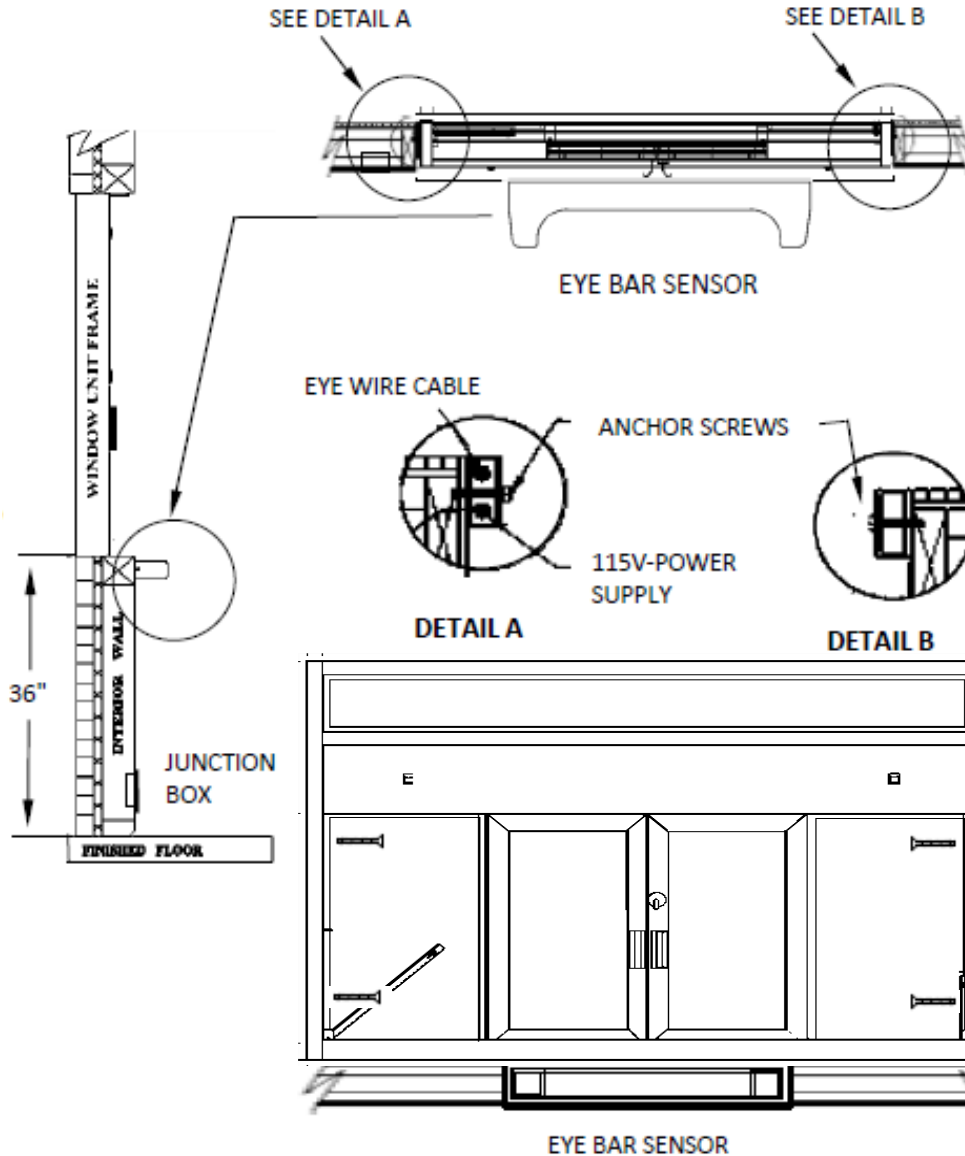


**TYPICAL  
BP-7252E INSTALLATION**

- 1) Quikserv windows must be installed level and square to work properly.
- 2) Anchor through each side jamb at two places approx. 5" at top and bottom of each jamb.(See Fig. 1)
- 3) Ensure to drill in between the eye wire and power cable located in the left jamb.
- 4) 115V / 15 Amp. Dedicated circuit required.
- 5) Recommended height from floor to service opening to be 36". (Check all local and city codes)
- 6) Silicone all exterior and interior joints.
- 7) All other type of anchoring to be approved by certified engineer.



**FIGURE 1**

**General Notes**

**Actual Dimension**  
72"(W) x 52"(H)

**Dual Service Opening**  
29-1/2" x 30"(H)  
15"(W) x 30"(H)

**Rough Opening**  
72-1/2"(W) x 41-1/2"(H)

Eye set to be mounted directly below the service opening. Bar to be mounted on the wall. (See Fig. 1)

**NOTE 2:**  
Anchor Screws to be supplied by contractor.

**NOTE 3:**  
Junction box to be supplied by contractor.

**CAUTION:**  
Use caution when drilling. The power supply cable and the eye bar cable are both located in the left jamb. (See Detail A)



**COVENANT**  
Security Equipment  
9323 N. Government Way  
Hayden, ID 83835

NOTE: THIS DRAWING EMBODIES A CONFIDENTIAL PROPRIETY DESIGN LICENSED BY COVENANT SECURITY EQUIPMENT. IT IS SUBMITTED UNDER A CONFIDENTIAL RELATIONS ALL PATENT. MANUFACTURING AND SALE RIGHTS REGARDING THE SAME ARE RESERVED EXCEPT TO THE EXTENT RIGHTS ARE EXPRESSLY GRANTED TO OTHERS. THE RECIPIENT AGREES BY ACCEPTING HIP. THESE DRAWINGS NOT TO SUPPLY OR DISCLOSE ANY INFORMATION REGARDING THEM TO ANY UNAUTHORIZED PERSON.

TITLE: <b>INSTALLATION PROCEDURE</b>				
Drawing Name <b>CSE-QS-BP-7252E INSTALLATION DRAWING</b>				
DATE 3/21/2016	DRAWN BY RBV	SCALE NTS	SHEET 1 of 1	SIZE <b>A</b>