

TYPICAL FM-1 INSTALLATION

- 1) Quikserv windows must be installed level and square to work properly.
- 2) Anchor through each side at two places approx. 5" at top and bottom of each side jamb.
(See Figure 1)
- 3) Recommended height from floor to service opening to be 36".
(Check all local and city codes)
- 4) Silicone all exterior and interior joints
- 5) All other type of anchoring to be approved by certified engineer.

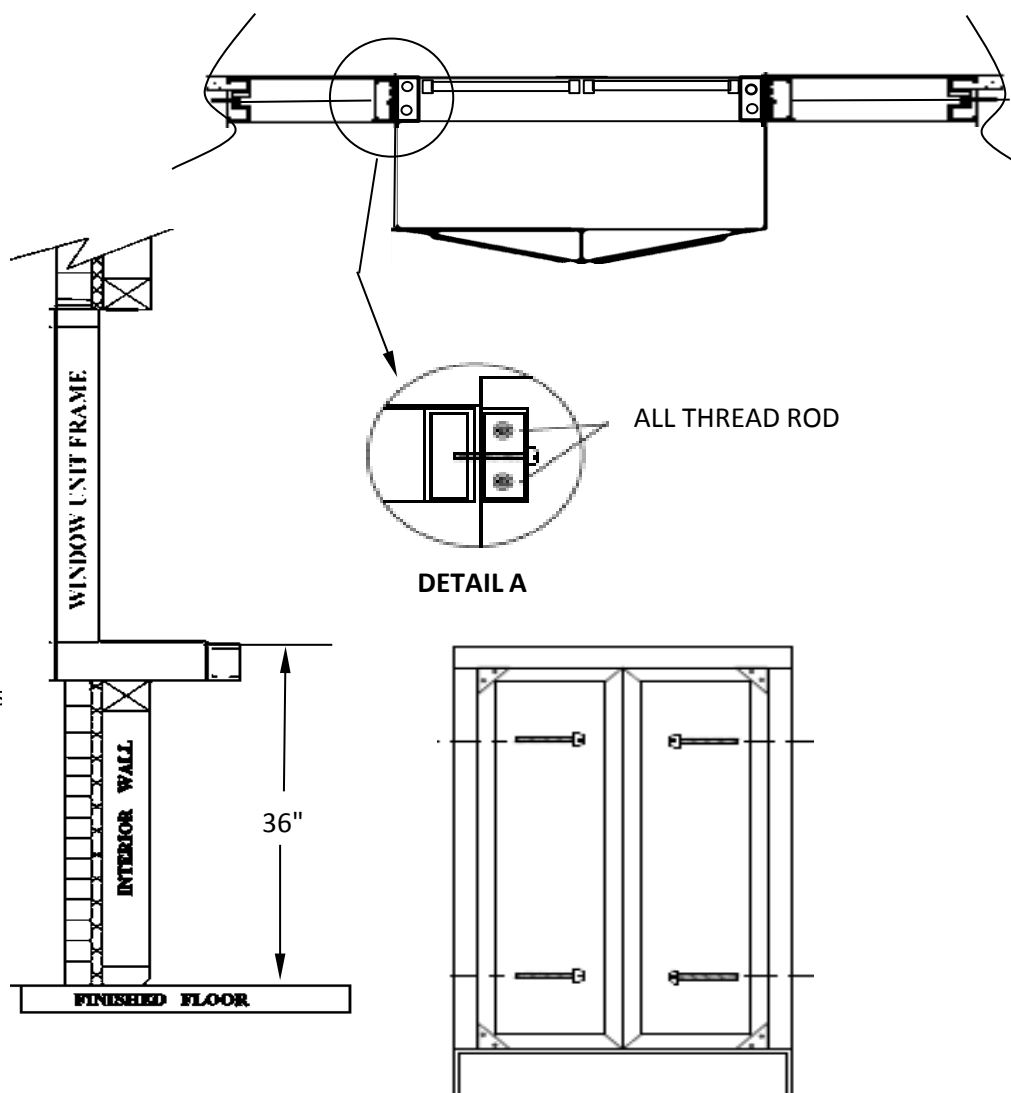


FIGURE 1

General Notes

Actual Dimension
24"(W) x 38-1/2"(H)

Service Opening
16"(W) x 32"(H)

Rough Opening
24-3/8"(W) x 38-7/8"(H)

NOTE 1:

Anchor Screws to be supplied by contractor.

CAUTION:

Use caution when drilling thru the side jambs. All thread rods are located in each side jambs.
(See Detail A)



COVENANT
Security Equipment
9323 N Government Way
Hayden, ID 83835

NOTE: THIS DRAWING EMBODIES A CONFIDENTIAL PROPRIETY DESIGN ORIGINATED AND OWNED BY COVENANT SECURITY EQUIPMENT SUBMITTED UNDER A CONFIDENTIAL RELATIONS ALL PATENT, MANUFACTURING, SALE RIGHTS REGARDING THE SAME ARE RESERVED EXCEPT TO THE EXTENT RIGHTS ARE EXPRESSLY GRANTED TO OTHERS. THE RECIPIENT AGREES BY ACCEPTING HIP. THESE DRAWINGS NOT TO SUPPLY OR DISCLOSE ANY INFORMATION REGARDING THEM TO ANY UNAUTHORIZED PERSON.

TITLE:

INSTALLATION PROCEDURE

DRAWING NAME:

CSE-QS-FM-1 INSTALLATION

DATE
4/10/2016

DRAWN BY
RBV

SCALE
NTS

SHEET
1 of 1

SIZE
A