


Installation Notes

1. Anchors to be supplied by others.
2. Anchor hole location to be determined by installation in rough opening.
3. Anchor at (2) places on each side as shown.

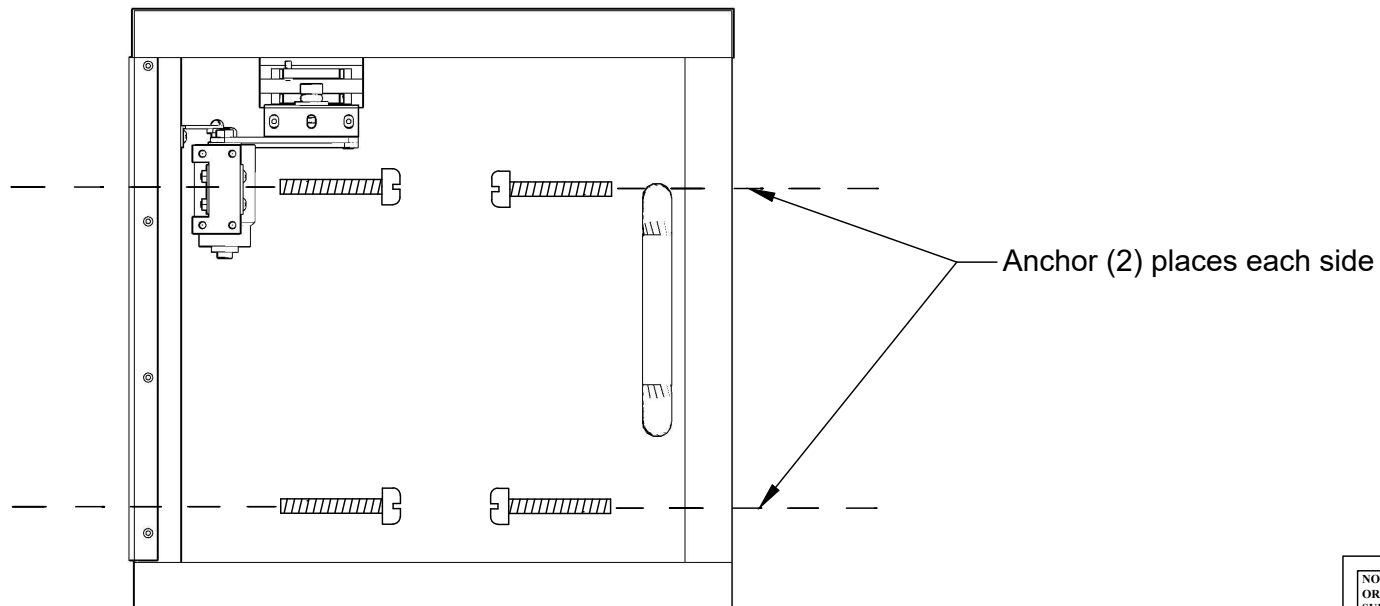

Key Notes

Actual Dimension
16"(W) x 16"(H)

Transfer Area
13 1/2"(W) x 13 1/2"(H) x 13 1/2"(D)

Rough Opening
16 1/4"(W) x 16 1/4"(H)

Important Notes

1. Drill all holes slightly oversize
2. Always use washers with bolts.
3. Bolts should be just snug, not torqued tightly.
4. Do not screw directly into BR material.
5. Use GE clear silicone caulk in all fabricated holes.
6. Failure to follow these steps may impair the integrity and performance of the BR material and may void all express or implied warranties.

Engineer Notes

Date drawn: 5/2/2017

Drawn by: BK.C.

File name: CSE-QS-PR-1616_INSTALLATION.pdf

NOTE: THIS DRAWING EMBODIES A CONFIDENTIAL PROPRIETY DESIGN ORIGINATED AND OWNED BY COVENANT SECURITY EQUIPMENT SUBMITTED UNDER A CONFIDENTIAL RELATIONS ALL PATENT, MANUFACTURING, SALE RIGHTS REGARDING THE SAME ARE RESERVED EXCEPT TO THE EXTENT RIGHTS ARE EXPRESSLY GRANTED TO OTHERS. THE RECIPIENT AGREES BY ACCEPTING HIP, THESE DRAWINGS NOT TO SUPPLY OR DISCLOSE ANY INFORMATION REGARDING THEM TO ANY UNAUTHORIZED PERSON.