
**COVENANT** Security Equipment

9323 N Government Way Hayden, ID 83835

## Installation Notes

SC

- 1. Quikserv windows must be installed level and square to work properly.
- Anchor through each side jamb at two places approx. 5" at top and bottom of each jamb. (See Figure)
- Recommended height from floor to the bottom of the window unit service opening is to be 36" above finish floor. ( Check all local and city codes )
- 4. Silicone all external and internal joints.
- 5. All other type of anchoring to be approved by certified engineer.

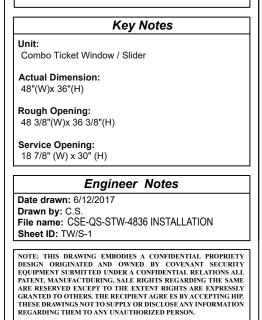

## **Interior View**

